

How to Playaway

1 Volume

Press once to move through volume levels. LCD displays levels number 1 thru 10.

2 Volume Speed

Press once to adjust the speed of the narrator's voice. LCD Screen displays the 3 levels as SPD (normal), SPD+ (fast) and SPD ++ (fastest).

3 Bookmark

Audio Bookmarks work just like regular bookmarks.

They help you mark key passages. You can set up to 50 individual bookmarks with your Playaway.


- Press bookmark button at appropriate place in audio.
- Once set, the bookmark icon will appear for 10 seconds prior to and after the bookmark on LCD screen.
- To remove a bookmark, press the Bookmark button anytime within the bookmark area.
- Move through bookmarks using Skip Forward or Skip Back buttons.

4 Skip Back

Press once and skip to the previous Chapter Break or Bookmark.

5 LCD Screen

The LCD automatically switches back and forth between chapter info and time remaining in the chapter. In its normal playing state, the LCD also shows the battery icon. At the conclusion of a book, the LCD will display the word END and then automatically shut off after 10 seconds.

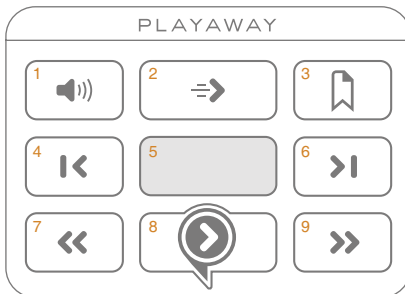

6 Skip Forward

Press once and skip to the next Chapter Break or Bookmark.

7 Reverse

Press and hold to scroll backward. LCD displays time remaining in a chapter. A single press of the button will reverse 15 seconds.

8 Playaway Button

- Power On: Press once -unit will power up in a paused state.
- Play: When on, press once to play.
- Pause: While playing, press once to pause.
- Power Off: Press & hold.
- Unit will count down and shut off.

9 Fast Forward

Press and hold to scroll forward. LCD displays time remaining in a chapter. A single press of the button will jump forward 15 seconds.

CONSUMER INFORMATION

Need assistance?

Visit us online at www.playawaydigital.com
Find answers and product information

Or call us at (877) 893-0808

1072805I R2
Printed in México




Playaway User Guide

To turn On, press  button.

5 easy steps to get started.

1

Pull tab to activate battery. To replace battery, snap open the door on the base of the player. One AAA battery provides up to 12 hours of play

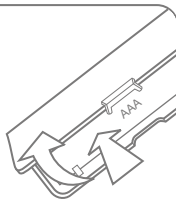

4

Press the Playaway button and enjoy.



2

Plug the set of ear phones included in this package (or any other ones you have) into the universal headphone jack.



5

Be sure to register your Playaway at www.playawaydigital.com for email updates of new titles and monthly drawings for free Playaway products.



3

Wear your Playaway around your neck (if you want) by pulling the clip from the top of the unit and threading the lanyard through.

